

Importator: Royal Computers, Bucuresti
Str. Culcer Ioan 33, tel. 021 410 31 00
UPS MUSTEK Online cu Sinusoida Pura,
tower, 6000VA/ 6000W, AVR, iesire Terminal
Block, display LCD, 16 x baterie 12V/7Ah,
Backup >4min, incarc.9h, USB, RS232,
dubla conversie, "PowerMust 6000 Online
LCD tower""6000-LCD-ON-T20"(timbru
verde 40lei)

Importator: Royal Computers, Bucuresti
Str. Culcer Ioan 32, tel: 021 410 21 00
UPS MUSTEK Online cu Sinusoida Pura,
tower, 6000VA/ 6000W, AVR, iesire Terminal
Block, display LCD, 16 x baterie 12V/7Ah,
Backup >4min, incarc.9h, USB, RS232,
dubla conversie, "PowerMust 6000 Online
LCD tower""6000-LCD-ON-T20"(timbru
verde 40lei)

Importator: Royal Computers, Bucuresti
Str. Culea Tean 32, tel: 021 410 21 00
UPS MUSTEK Online cu Sinusoida Pura,
tower, 6000VA/ 6000W, AVR, iesire Terminal
Block, display LCD, 16 x baterie 12V/7Ah,
Backup >4min, incarc.9h, USB, RS232,
dubla conversie, "PowerMust 6000 Online
LCD tower""6000-LCD-ON-T20"(timbru
verde 40lei)

Importator: Royal Computers, Bucuresti
Str. Culcer Ioan 33, tel: 021 410 31 00
UPS MUSTEK Online cu Sinusoida Pura,
tower, 6000VA/ 6000W, AVR, iesire Terminal
Block, display LCD, 16 x baterie 12V/7Ah,
Backup >4min, incarc.9h, USB, RS232,
dubla conversie, "PowerMust 6000 Online
LCD tower""6000-LCD-ON-T20"(timbru
verde 40lei)

Importator: Royal Computers, Bucuresti
Str. Culcei Ilean 33, tel: 021 410 31 00
UPS MUSTEK Online cu Sinusoida Pura,
tower, 6000VA/ 6000W, AVR, iesire Terminal
Block, display LCD, 16 x baterie 12V/7Ah,
Backup >4min, incarc.9h, USB, RS232,
dubla conversie, "PowerMust 6000 Online
LCD tower""6000-LCD-ON-T20"(timbru
verde 40lei)

Importator: Royal Computers, Bucuresti
Str. Culcer Ioan 32, tel: 021 410 21 00
UPS MUSTEK Online cu Sinusoida Pura,
tower, 6000VA/ 6000W, AVR, iesire Terminal
Block, display LCD, 16 x baterie 12V/7Ah,
Backup >4min, incarc.9h, USB, RS232,
dubla conversie, "PowerMust 6000 Online
LCD tower""6000-LCD-ON-T20"(timbru
verde 40lei)

Importator: Royal Computers, Bucuresti
Str. Culcar Ioan 32, tel: 021 410 21 00
UPS MUSTEK Online cu Sinusoida Pura,
tower, 6000VA/ 6000W, AVR, iesire Terminal
Block, display LCD, 16 x baterie 12V/7Ah,
Backup >4min, incarc.9h, USB, RS232,
dubla conversie, "PowerMust 6000 Online
LCD tower""6000-LCD-ON-T20"(timbru
verde 40lei)

Importator: Royal Computers, Bucuresti
Str. Culcer Ioan 33, tel: 021.410.31.00
UPS MUSTEK Online cu Sinusoida Pura,
tower, 6000VA/ 6000W, AVR, iesire Terminal
Block, display LCD, 16 x baterie 12V/7Ah,
Backup &4min, incarc.9h, USB, RS232,
dubla conversie, "PowerMust 6000 Online
LCD tower""6000-LCD-ON-T20"(timbru
verde 40lei)

Importator: Royal Computers, Bucuresti
Str. Culcer Ioan 33, tel: 021 410 21 00
UPS MUSTEK Online cu Sinusoida Pura,
tower, 6000VA/ 6000W, AVR, iesire Terminal
Block, display LCD, 16 x baterie 12V/7Ah,
Backup >4min, incarc.9h, USB, RS232,
dubla conversie, "PowerMust 6000 Online
LCD tower""6000-LCD-ON-T20"(timbru
verde 40lei)

Importator: Royal Computers, Bucuresti
Str. Culcer Ioan 32, tel: 021 410 21 00
UPS MUSTEK Online cu Sinusoida Pura,
tower, 6000VA/ 6000W, AVR, iesire Terminal
Block, display LCD, 16 x baterie 12V/7Ah,
Backup >4min, incarc.9h, USB, RS232,
dubla conversie, "PowerMust 6000 Online
LCD tower""6000-LCD-ON-T20"(timbru
verde 40lei)

Importator: Royal Computers, Bucuresti
Str. Culea Ioan 32, tel.: 021 410 21 00
UPS MUSTEK Online cu Sinusoida Pura,
tower, 6000VA/ 6000W, AVR, iesire Terminal
Block, display LCD, 16 x baterie 12V/7Ah,
Backup >4min, incarc.9h, USB, RS232,
dubla conversie, "PowerMust 6000 Online
LCD tower""6000-LCD-ON-T20"(timbru
verde 40lei)

Importator: Royal Computers, Bucuresti
Str. Culcer Ioan 33, tel: 021.410.21.00
UPS MUSTEK Online cu Sinusoida Pura,
tower, 6000VA/ 6000W, AVR, iesire Terminal
Block, display LCD, 16 x baterie 12V/7Ah,
Backup &4min, incarc.9h, USB, RS232,
dubla conversie, "PowerMust 6000 Online
LCD tower""6000-LCD-ON-T20"(timbru
verde 40lei)

Importator: Royal Computers, Bucuresti
Str. Culcer Ioan 32, tel: 021.410.21.00